

Matchprint Virtual Proofing System - LCD

Version 3.1

Quick Start

KPG 041109_EN

Technical Support

United States and Canada: 1-877-574-7274

For all other global support numbers, please call the local KPG Service Department or your certified distributor.

Additional Documents

For additional information on system setup, light-controlled viewing box settings, color management, and custom color profiles, go to the ***Administrator Reference.pdf*** located in the Documents folder of the installation CD.

For information on standard operating procedures such as uploading and viewing images, go to the ***Operator Reference.pdf*** located in the Documents folder of the installation CD.

Equipment Installation

For best color viewing, Kodak Polychrome Graphics recommends installing equipment in a room with subdued lighting.

Install your equipment according to the manufacturer's instructions:

- Connect both the **Digital Video** cable and the **USB** cable from the monitor to the back of the Macintosh computer. **Note:** USB is internal in an ADC cable.



Digital video cable – same connector on both ends

- Connect the **Matchprint Virtual Monitor Calibrator** to a USB port on the Macintosh or a self-powered USB hub. **Do not** use the USB port located on the keyboard. **Note:** Before connecting to the USB port, thread the cord through the counter-balance. See instruction sheet for installing calibrator.
- Connect to the Internet using **Internet Explorer 5**, **Netscape 7.x**, or **Safari 1.2.x**. If needed, contact your system administrator for assistance.

Software Installation


- 1) Insert the Matchprint Virtual Proofing System - LCD v3.1 installation CD into the CD drive.
- 2) When the CD icon displays on your desktop, double click to view the contents.
- 3) Double-click the **MVP LCD 3.1.x Installer** icon. Follow the prompts to complete installation.
- 4) Restart your computer.

First Application Launch Instructions

Apple's new security enhancements released in OSX 10.3.5 do not allow applications to be launched for the first time using an Apple script.

Complete the following instructions to launch the Matchprint Virtual Proofing System – LCD application if you are using 10.3.5 or newer. After completing these steps, you can launch the application in the normal method.

- 1) Navigate to **Mac HD>Users>name¹>Applications>Matchprint Virtual** folder.
- 2) Double-click on the **Matchprint Virtual** icon to launch the main application.

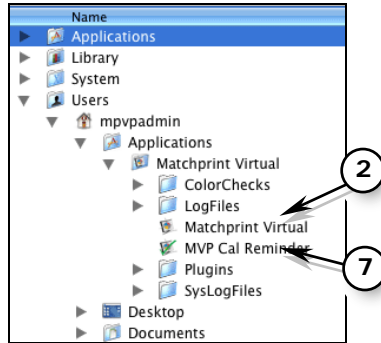


- 3) At the next screen prompt, enter the application serial number (located inside cover of CD case behind literature) and click **OK**.
- 4) At the “Expiring License” warning dialog, click **OK**.
- 5) From the menu bar, select the **Matchprint Virtual>Quit Matchprint Virtual** menu item.
- 6) Navigate to **Mac HD>Users>name>Applications>Matchprint Virtual** folder.
- 7) Double-click the **MVP Cal Reminder** icon.
- 8) When the “System Uncalibrated” prompt displays, click the **Dismiss for 24 hours** button.
- 9) Continue with System Settings.

System Settings

- 1) Navigate to **Macintosh HD > Applications > Utilities > ColorSync Utilities**.
- 2) Select the **CMMs** tab and set the **Preferred CMM** to **KPG CFM**.
- 3) Quit the ColorSync Utility by clicking on the ColorSync Utility pull-down menu and selecting **Quit ColorSync Utility**.

For best color viewing, Kodak Polychrome Graphics recommends the following system preference settings:

- 4) At the Apple menu , select **System Preferences** then:

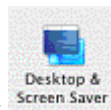

- Go to **Desktop & Screen Saver** and set **Start screen saver** to 30 minutes or greater on the sliding scale to prevent screen savers from interfering with the calibration process.




- Go to **Energy Saver** and set both sliding scales to **Never**

- 5) Close System Preferences when complete.

¹ This is the name of the user (administrator) that installed the Matchprint Virtual Proofing System – LCD application. As part of the installation this user must provide the name and password of a user with administrator privileges.

Licensing

Matchprint Virtual Proofing System – LCD software comes with a 5-day temporary license so you can use your software immediately. However, you need to request and enable your license code by completing the following steps. You will need a valid email address to receive your final license.

- 1) At the Dock, click and hold the **Matchprint Virtual** folder , then select **MVP Preferences** from the pop-up menu. Wait approximately 30 seconds until the **Preference** window displays.
- 2) At the **Preferences** window, **License** tab, record the monitor serial number (e.g., ENC_CGI_XXXXXXXX or APP_XXXX_XXXXX). *Do not use the monitor number found on the outside of the box.*
- 3) Email your monitor number and application serial number (located inside cover of CD case behind literature) to mvplicensing@kpgraphics.com.


When your license code arrives, enter it into the **Preferences > License** tab using the following instructions.

- 1) In the **Preferences** window, click on the **License** tab.
- 2) Click the **Add License** button.
- 3) Copy and paste the license code you received via email into the entry field. Click **OK**.
- 4) Close the **Preferences** window.

Calibrating Your Monitor

The monitor calibration requires the monitor be on for 1 hour prior to doing the calibration. If the monitor has not been on long enough, a countdown displays indicating the amount of time left before calibration can occur.

Monitor Calibration must be done every 24 hours to ensure accurate color viewing.

- 1) At the Dock, click and hold the **Matchprint Virtual** folder , then select **MVP Calibrate System** from the pop-up menu.
- 2) The monitor displays a window to calibrate the **Matchprint Virtual Monitor Calibrator**. Follow the screen prompts to place the calibrator face down on a flat, opaque surface, such as the table, so no light enters the sensors and click the **OK** button. Wait approximately 8 seconds until calibration is complete.
- 3) Place the calibrator on top of the target pattern displayed on the screen with color sensors facing the screen.
- 4) Press the **Return** key on your keyboard.
- 5) A series of color patches display on the monitor screen. **DO NOT** move the calibrator until you see a calibration result dialog. Click the **OK** until all windows are closed.

If calibration fails, quit Matchprint Virtual, and repeat the process. If calibration continues to fail, call technical support for assistance.

Download Client Proofing Software

- 1) Using your Internet browser, go to <http://www.matchprintvirtual.com/asp/download/default.asp>
- 2) Locate the **Download Matchprintvirtual Client Software** for Mac OS X and download the software to your desktop.
- 3) Locate the **Download P3, the Personal Proofing Publisher** software for Mac OS X and download the software to your desktop.
- 4) On your desktop open the **NPC-Mac-x.x_LCD** (Proofing Client) icon. Double-click the installer file and follow the prompts to install the software.
- 5) On your desktop open the **P3 Installer** icon. Double-click the installer file and follow the prompts to install the software.
- 6) Navigate to **Macintosh HD > RealTimeProof > Proofing Client** folder and launch the Proofing Client software.



- 7) In the **Settings** window change **Actual Size** setting to:
 - **1600 x 1200** Res for CG21 Eizo
 - **1680 x 1050** for 20" Apple
 - **1920 x 1200** for 23" Apple
- 8) Click **OK**.

Account Setup

- 1) You will receive an email invitation to setup your account. Click on the URL as instructed in the email and your Internet browser will bring you to the login screen.

Dear New User

Administrator [mailto:Admin@sample.com] invites you to join the "Your Company Name" Workspace at Matchprintvirtual.com.

You were granted the [privilege role] role.
Matchprintvirtual.com has identified you as a valid user.
Username: NewUser@sample.com
To accept the invitation, click on the following URL:
<<http://www.matchprintvirtual.com/reg.asp?p=2&w=1&v=38761940921076594&i=1805696>>

If you wish to decline this invitation, simply disregard this email or click on the following URL:
<<http://www.matchprintvirtual.com/reg.asp?p=3&v=38761940921076594>>
(clicking this URL will inform The Administrator that you declined the invitation)

- 2) Enter all logon details.
- 3) Click on the **Update** button at the bottom of the screen to complete your account setup.

Next Steps

For additional information on system setup, light-controlled viewing box settings, color management, and custom color profiles, go to the ***Administrator Reference.pdf*** located in the Documents folder of the installation CD.

For information on standard operating procedures such as uploading and viewing images, go to the ***Operator Reference.pdf*** located in the Documents folder of the installation CD.